

pre-authenticate

Syntax [no] pre-authenticate

Release Information Command introduced in JUNOS Release 8.1.0.

Description Configures an AAA profile to support RADIUS preauthentication. During the preauthentication process, the router sends an Access-Request message to a RADIUS preauthentication server to obtain an AAA logical line identifier (LLID) for each subscriber. In response, the preauthentication server returns the LLID in the RADIUS Calling-Station-Id [31] attribute of an Access-Accept message. The **no** version removes preauthentication support from the AAA profile.

Mode AAA Profile Configuration

Published: 2009-10-08