

radius relay udp-checksum

Syntax radius relay udp-checksum { enable | disable }
no radius relay udp-checksum

Release Information Command introduced before JUNOS Release 7.1.0.

Description Enables or disables UDP checksum for RADIUS relay packets on virtual routers that you configure for B-RAS. The **no** version restores the default value, enable.

- Options**
- enable—Enables UDP checksum
 - disable—Disables UDP checksum

Mode Global Configuration

Published: 2009-10-08