

## show aaa accounting default

---

**Syntax** show aaa accounting { *subscriberType* } default [ *filter* ]

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Displays the AAA accounting method used for the particular type of subscriber.

**Options** ■ *subscriberType*—Specifies the type of subscriber:

- atm1483—ATM 1483 subscribers
- ip—IP subscriber management interfaces
- ipsec—IPSec subscribers
- ppp—PPP subscribers
- radius-relay—RADIUS relay subscriber
- tunnel—Tunnel subscribers

■ *filter*—See Filtering show Commands

**Mode** Privileged Exec

---

Published: 2009-10-08