

show aaa authentication default

Syntax show aaa authentication { *subscriberType* } default [*filter*]

Release Information Command introduced before JUNOS Release 7.1.0.

Description Displays the AAA authentication method list used for the particular type of subscriber.

Options ■ *subscriberType*—Specifies the type of subscriber:

- atm1483—ATM 1483 subscribers
- ip—IP subscriber management interfaces
- ipsec—IPSec subscribers
- ppp—PPP subscribers
- radius-relay—RADIUS relay subscriber
- tunnel—Tunnel subscribers

■ *filter*—See Filtering show Commands

Mode Privileged Exec

Published: 2009-10-08