

show atm interface

Syntax	show atm interface { atm <i>interfaceSpecifier</i> brief } [delta] [<i>filter</i>]
Release Information	Command introduced before JUNOS Release 7.1.0.
Description	Displays configuration information about an ATM interface or a brief description of all ATM (major) interfaces configured in the router.
Options	<ul style="list-style-type: none">■ <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see Interface Types and Specifiers■ brief—Displays the status and number of configured VCs for all ATM interfaces configured in the router■ delta—Displays baselined statistics■ <i>filter</i>—See Filtering show Commands
Mode	Privileged Exec, User Exec
Related Topics	<ul style="list-style-type: none">■ Monitoring the QoS Configuration of ATM Interfaces■ Monitoring the Policy Configuration of ATM Subinterfaces

Published: 2009-10-08