

show icr-partition

Syntax	show icr-partition [<i>interfaceType</i> <i>interfaceSpecifier</i> [<i>vrid</i>]] [<i>filter</i>]
Release Information	Command introduced in JUNOS Release 10.3.0.
Description	Displays ICR partition information for the VRID configured on the specified interface.
Options	<ul style="list-style-type: none">■ <i>interfaceType</i>—One of the following interface types listed in Interface Types and Specifiers<ul style="list-style-type: none">■ fastEthernet■ gigabitEthernet■ tenGigabitEthernet■ <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see Interface Types and Specifiers■ <i>vrid</i>—Virtual router ID identifier; a number in the range 1 – 255■ <i>filter</i>—See Filtering show Commands
Mode	Privileged Exec
Related Topics	<ul style="list-style-type: none">■ Monitoring the Configuration of an ICR Partition Attached to an Interface■ Monitoring the Status of ICR Partition Accounting■ Monitoring the Configuration of ICR Partitions

Published: 2009-10-08