

show interfaces

Syntax	show interfaces <i>interfaceType interfaceSpecifier</i> [<i>delta</i>] [<i>brief</i>] [<i>filter</i>]
Release Information	Command introduced before JUNOS Release 7.1.0.
Description	Displays the current state of the interface you specify.
Options	<ul style="list-style-type: none">■ <i>interfaceType</i>—Interface type; see Interface Types and Specifiers■ <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see Interface Types and Specifiers; for ATM, subinterfaces are not supported by the syntax■ <i>delta</i>—Displays baselined statistics■ <i>brief</i>—Displays a brief summary of the interface■ <i>filter</i>—See Filtering show Commands
Mode	Privileged Exec, User Exec
Related Topics	<ul style="list-style-type: none">■ Monitoring the QoS Configuration of ATM Interfaces■ Monitoring the QoS Configuration of Fast Ethernet, Gigabit Ethernet, and 10-Gigabit Ethernet Interfaces■ Monitoring Interfaces and Policy Lists

Published: 2009-10-08