

show ip dhcp-local statistics

Syntax show ip dhcp-local statistics [interface [*interfaceType interfaceSpecifier*]]
[delta] [*filter*]

Release Information Command introduced before JUNOS Release 7.1.0.

Description Displays statistics for the DHCP local server.

- Options**
- *interfaceType*—Interface type; see *Interface Types and Specifiers* in *About This Guide*
 - *interfaceSpecifier*—Particular interface; format varies according to interface type; see *Interface Types and Specifiers*
 - delta—Displays baselined statistics
 - *filter*—See *Filtering show Commands*

Mode Privileged Exec

Related Topics ■ [Monitoring DHCP Local Server Statistics](#)

Published: 2009-10-08