

show radius statistics

Syntax show radius [*serverType*] statistics [delta] [*filter*]

Release Information Command introduced before JUNOS Release 7.1.0.
 pre-authentication keyword added in JUNOS Release 8.1.0.

Description Displays statistics for the RADIUS servers configured on the router.

- Options**
- *serverType*—One of the following RADIUS server types:
 - authentication—Displays authentication statistics only
 - accounting—Displays accounting statistics only
 - dynamic-request—Displays dynamic-request statistics only
 - pre-authentication—Displays preauthentication statistics only
 - delta—Displays baselined statistics
 - *filter*—See Filtering show Commands

Mode Privileged Exec

Related Topics ■ Monitoring RADIUS Dynamic-Request Server Information

Published: 2009-10-09