

## operational-virtual-router

---

**Syntax**    `operational-virtual-router vrName`  
`no operational-virtual-router`

**Release Information**    Command introduced before JUNOS Release 7.1.0.

**Description**    Specifies the virtual router parameter for a user entry in the local user database. The subscriber is assigned to the operational virtual router only if the default virtual router performs the authentication. The **no** version deletes the operational virtual router parameter from the user entry in the local user database.

**Options**    ■    *vrName*—Name of virtual router

**Mode**    Local User Configuration

---

Published: 2009-10-08