

## radius icr-partition-accounting

---

**Syntax** radius icr-partition-accounting { enable | disable }  
no radius icr-partition-accounting

**Release Information** Command introduced in JUNOS Release 10.3.0.

**Description** Enables or disables sending of the ICR Partition-Accounting-On or Partition-Accounting-Off messages to the RADIUS servers. The **no** version restores the default value, disable.

- Options**
- enable—Configures the RADIUS client to enable the use of Partition-Accounting-On and Partition-Accounting-Off messages. When this option is used, these messages are sent to the accounting server configured on the virtual router.
  - disable— Configures the RADIUS client to disable the use of Partition-Accounting-On and Partition-Accounting-Off messages; this is the default setting. When this option is used, the Partition-Accounting messages are not sent to the accounting server configured on the virtual router.

**Mode** Global Configuration

---

Published: 2009-10-08