

## radius rollover-on-reject

---

**Syntax** radius rollover-on-reject { enable | disable }  
no radius rollover-on-reject

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** On a virtual router, specifies whether the router should roll over to the next RADIUS server when the router receives an access-reject message for the user it is authenticating. The **no** version restores the default value, disable.

- Options**
- enable—Specifies the feature
  - disable—Disables the feature; this is the default setting

**Mode** Global Configuration

---

Published: 2009-10-08