

## radius tunnel-accounting

---

**Syntax** radius tunnel-accounting { enable | disable }  
no radius tunnel-accounting

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Enables or disables tunnel accounting. The **no** version restores the default value, disable.

- Options**
- enable—Specifies the feature
  - disable—Disables the feature; this is the default setting

**Mode** Global Configuration

---

Published: 2009-10-08