

show frame-relay subinterface

Syntax	show frame-relay subinterface [<i>interfaceType interfaceSpecifier</i>] [brief] [delta] [<i>filter</i>]
Release Information	Command introduced before JUNOS Release 7.1.0.
Description	Displays statistics about Frame Relay subinterfaces.
Options	<ul style="list-style-type: none">■ <i>interfaceType</i>—One of the following interface types listed in Interface Types and Specifiers :<ul style="list-style-type: none">■ serial■ pos■ mlframe-relay■ <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see Interface Types and Specifiers■ brief—Displays a summary of subinterface information■ delta—Displays baselined statistics■ <i>filter</i>—See Filtering show Commands
Mode	Privileged Exec, User Exec
Related Topics	<ul style="list-style-type: none">■ Monitoring the Policy Configuration of Frame Relay Subinterfaces

Published: 2009-10-08