

show ip dhcp-local limits

Syntax	show ip dhcp-local limits [interface <i>InterfaceType</i> <i>InterfaceSpecifier</i> <i>filter</i>]
Release Information	Command introduced before JUNOS Release 7.1.0. interface keyword and <i>interfaceType</i> and <i>interfaceSpecifier</i> variables added in JUNOS Release 7.1.0.
Description	Displays the maximum number of leases available for each VPI/VCI, VLAN, and Ethernet subnetwork, or for a particular interface or subinterface from the DHCP local server.
Options	<ul style="list-style-type: none">■ <i>interfaceType</i>—Interface type; see Interface Types and Specifiers■ <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see Interface Types and Specifiers■ <i>filter</i>—See Filtering show Commands
Mode	Privileged Exec
Related Topics	<ul style="list-style-type: none">■ Monitoring the Maximum Number of Available Leases

Published: 2009-10-08