

## show l2tp dial-out virtual-router

---

**Syntax** show l2tp dial-out virtual-router [ allVirtualRouters ] [ detail ] [ state *operState* ]  
[ *filter* ]

To display summary information:

show l2tp dial-out virtual-router summary [ allVirtualRouters ] [ *filter* ]

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Displays dial-out state machine operational status and statistics within the current virtual router context.

- Options**
- allVirtualRouters—Displays dial-out information across all virtual routers
  - detail—Displays configuration, state, and statistics
  - *operState*—One of the following operational states:
    - down
    - inService
    - initFailed
    - initPending
  - *filter*—See Filtering show Commands
  - summary—Displays aggregate counts for dial-out state machines in each of the possible operational and administrative states

**Mode** Privileged Exec

---

Published: 2009-10-09