

## show subscribers

---

**Syntax** To display detailed information:

```
show subscribers [ ipv6 [ ipv6Prefix ] ]  
[ domain domainName | icr-partition icrPartitionLocationId | interface { atm | ethernet  
}  
interfaceSpecifier | port interfaceSpecifier |  
slot slotNumber | username userName |  
virtual-router vrName ] [ filter ]
```

To display summary information:

```
show subscribers summary [ domain | icr-partition | interface | port | slot |  
virtual-router ]  
[ filter ]
```

**Release Information** Command introduced before JUNOS Release 7.1.0.  
**interface**, **atm**, and **ethernet** keywords added in JUNOS Release 7.3.0.  
**slot** keyword and *slotNumber* variable added in JUNOS Release 7.3.0.  
**icr-partition** keyword and *icrPartitionLocationId* variable added in JUNOS Release 10.3.0.

**Description** Displays the active subscribers on your router.

- Options**
- **ipv6**—Displays IPv6 subscribers for the domain
  - *ipv6Prefix*—Prefix that defines the IPv6 network that you want to filter
  - *userName*—Username of active subscriber
  - **domain**—Displays active subscribers for the domain
  - *domainName*—Domain name matching usernames of active subscribers
  - **icr-partition**—Displays active subscribers for the ICR partition
  - *icrPartitionLocationId*—A unique identifier for each ICR partition on a chassis. Note that this ID different from the partition ID, which is configured using the **ip vrrp vrid icr-partition partitionId** command. The partition location ID that you specify here is a combination of the interface within the chassis on which the ICR partition is configured and the VRRP ID, which is system-defined and nonconfigurable.
  - **interface**—Displays active subscribers for the the specified interface, **atm** or **ethernet**, or in the **summary** version, displays active subscribers for all ATM and Ethernet interfaces
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see Interface Types and Specifiers
  - **port**—Displays active subscribers for the port
  - **slot**—Displays active subscribers for the slot

- *slotNumber*—Number of the chassis slot of the line module in the range 0–2 (ERX310 model), 0–6 (ERX7xx models), 0–13 (ERX14xx models), 0–5 (E120 router), and 0–16 (E320 router)
- *virtual-router*—Displays active subscribers for the VR
- *vrName*—Name of the VR to which interfaces of active subscribers are bound
- *filter*—See Filtering show Commands
- *summary*—Displays the active subscribers for each domain, interface, port, slot, or virtual router

**Mode** Privileged Exec

---

Published: 2009-10-09