

tacacs-server key

Syntax tacacs-server key *keyValueString*

 no tacacs-server key

Release Information Command introduced before JUNOS Release 7.1.0.

Description Sets or resets the authentication and encryption key value shared by all TACACS+ servers that do not have a server-specific key set up by the **tacacs-server host** command. The **no** version removes the key value shared by all TACACS+ servers.

Options ■ *keyValueString*—String of up to 100 characters; must match key configured on the TACACS+ daemon

Mode Global Configuration

Published: 2009-10-09