

tunnel-subscriber authentication

Syntax tunnel-subscriber authentication { enable | disable }
no tunnel-subscriber authentication

Release Information Command introduced in JUNOS Release 9.1.0.

Description Configures whether tunnel subscribers within the domain map are authenticated with the authentication server or are granted access without individual authentication. The **no** version restores the default condition, where users are not authenticated by an authentication server.

- Options**
- enable—Enables tunnel subscriber authentication by the authentication server
 - disable—Disables tunnel subscriber authentication by the authentication server; all users in the domain are granted access without individual authentication; this is the default condition

Mode Domain Map Configuration

Related Topics

- *Configuring Tunnel Subscriber Authentication in the JUNOS Broadband Access Configuration Guide*

Published: 2009-10-09