

Monitoring the Status of ICR Partition Accounting

Purpose Display the status of ICR partition accounting.

Action To display the status of ICR partition accounting:

```
host1#show radius icr-partition-accounting  
enabled
```

Meaning ICR partition accounting status is either enabled or disabled.

Related Topics ■ show radius icr-partition-accounting

Published: 2009-10-07