

Chapter 3

Configuring Multilink Frame Relay

This chapter describes how to configure Multilink Frame Relay (MLFR) interfaces on E-series routers.

This chapter contains the following sections:

- Overview on page 127
- Platform Considerations on page 130
- References on page 130
- Supported MLFR Features on page 131
- Unsupported MLFR Features on page 132
- Before You Configure MLFR on page 132
- Configuration Tasks on page 132
- Monitoring MLFR on page 135

Overview

MLFR aggregates multiple physical links into a single logical bundle. More specifically, MLFR bundles multiple link-layer channels into a single network layer channel.

The routers joined by the multilink each assign the same unique name to the bundle. A bundle can consist of multiple physical links of the same type—such as multiple asynchronous lines—or can consist of physical links of different types—such as leased synchronous lines and dial-up asynchronous lines.

The router treats MLFR like nonmultilink Frame Relay. Packets received with an MLFR header are subject to sequencing. Packets received without the MLFR header cannot be sequenced and can be delivered only on a first-come, first-served basis.

T1/E1 Connections

Some users need more bandwidth than a T1 or an E1 channel can provide, but cannot afford the expense or do not need the bandwidth of T3 or E3. Equal-cost multipath (ECMP) is one way to achieve a bandwidth greater than DS1 service without going to the expense and infrastructure required for DS3 service. MLFR is commonly used as an alternative to ECMP to deliver NxT1 service. Cost-analysis of NxT1 versus DS3 service typically imposes a practical limit of 8xT1 service; that is, aggregation of no more than eight T1 or E1 connections into an MLFR bundle.

This implementation of MLFR logically aggregates up to eight T1 or E1 connections into a single virtual connection, known as a bundle, to a given customer site. The connections can terminate at a CPE (Figure 5) or a Multilink Frame Relay bridge (Figure 6).

Figure 5: MLFR Aggregation of T1 Lines into a Single Bundle


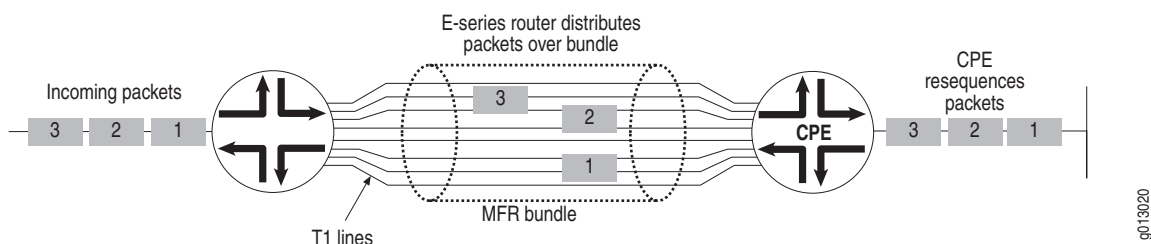


Figure 6: Terminating the Bundle at an MLFR Bridge

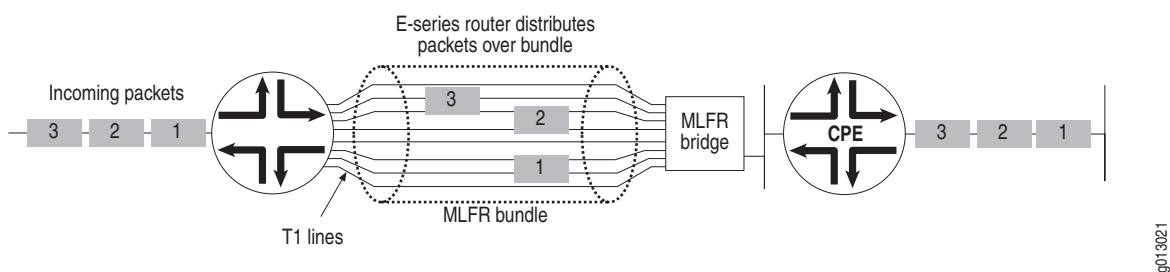

MLFR Link Integrity Protocol

Member links in an MLFR bundle support the MLFR Link Integrity Protocol (LIP). LIP offers several types of messages, which allow member links to join and leave a bundle. See Table 10.

Table 10: LIP Messages and Functions


| LIP Message | Function |
|-----------------|--|
| Add-Link | Member link sends this message to request to join a bundle. |
| Add-Link-Ack | Member link sends this message when it receives an Add-Link message. |
| Add-Link-Rej | Member link sends this message to reject a request to join a bundle. |
| Hello | Member link sends this message to check the status of another member. |
| Hello-Ack | Member link sends this message when it receives a Hello message. |
| Remove-Link | Member link sends this message to request to leave a bundle. |
| Remove-Link-Ack | Member link sends this message when it receives a Remove-Link message. |

The DTE creates a link management interface (LMI) with the network by encapsulating the Frame Relay frame within an MLFR frame. You assign one or more data link control identifiers (DLCIs) to a bundle.

Interface Stacking

Because MLFR aggregates multiple link-layer channels onto a single network layer IP interface, protocol layering within the router is different than it is for nonmultilink Frame Relay. See Figure 7.

Figure 7: Structure of MLFR

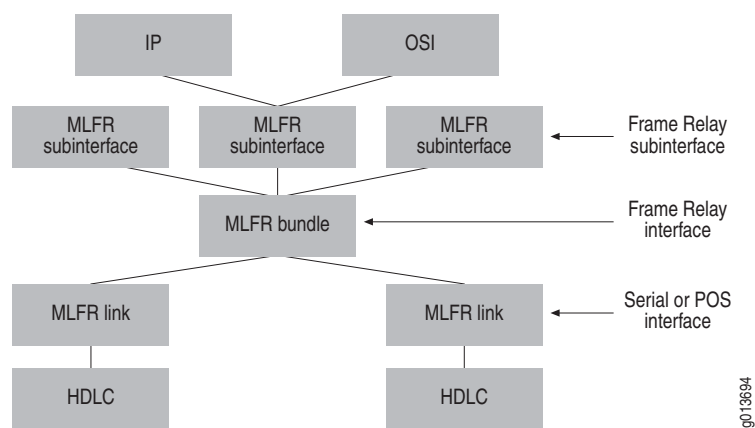

The MLFR Link Integrity Protocol runs on each link in a bundle. However, from the major Frame Relay interface (the bundle) upward, the interface stacking is the same as for nonmultilink Frame Relay. For example, LMI runs only on the bundle. The bundle sends and receives all MLFR packets.

Platform Considerations

You can configure MLFR interfaces on the following E-series routers:

- ERX-1440 router
- ERX-1410 router
- ERX-710 router
- ERX-705 router
- ERX-310 router



NOTE: The E120 router and the E320 router do not support configuration of MLFR interfaces.

Module Requirements

For information about the modules that support MLFR interfaces on ERX-14xx models, ERX-7xx models, and the ERX-310 router:

- See *ERX Module Guide, Table 1, Module Combinations* for detailed module specifications.
- See *ERX Module Guide, Appendix A, Module Protocol Support* for information about the modules that support MLFR.

Interface Specifiers

The interface specifier format that you use depends on the type of physical interface on which you want to configure MLFR.

For more information about supported interface types and specifiers on E-series routers, see *Interface Types and Specifiers* in *JUNOS Command Reference Guide, About This Guide*.

References

For more information about the MLFR protocol, consult the following resources:

- Multilink Frame Relay UNI/NNI Implementation Agreement, FRF.16 (April 2000)
- Frame Relay Forum—Frame Relay Fragmentation Implementation Agreement, FRF.12 (December 1997)
- ANSI T1.617 Annex D
- ITU-T Q.933 Annex A

Supported MLFR Features

E-series routers support the following MLFR features on the cOCx/STMx and CT3 line modules:

- Logical aggregation of up to eight T1 or E1 links in a bundle
- Monotonically increasing sequence numbers for each circuit

All packets distributed across the member links have monotonically increasing sequence numbers for each circuit. This feature enables the remote router on the customer premises to perform resequencing (if it is configured to do so).

- Static configuration of the links participating in a multilink bundle
- Round-robin packet distribution
 - On CT3 line modules, packet distribution across the member links in a bundle is handled only in a round-robin fashion. The round-robin approach is used even when the member links have different line rates.
 - On cOCx/STMx and COCX-F3 line modules, the router keeps track of the link with the least traffic. If this link cannot forward a packet, the router attempts to forward the traffic on a different link. If this attempt also fails, the router uses a round-robin approach.

You can configure bundles as follows:

- On a cOCx/STMx line module and its corresponding I/O modules, you can configure:
 - Member links from different OC3/STM1 ports in the same bundle
 - The 336 available T1 channels combined in any manner that does not exceed 8 links per bundle (for example, 336 single-link T1 bundles, 42 eight-link bundles, or 41 eight-link bundles and 8 single-link bundles)
 - The 252 available E1 channels combined in any manner that does not exceed 8 links per bundle (for example, 252 single-link E1 bundles, 34 eight-link bundles, or 33 eight-link bundles and 8 single-link bundles)
- On a COCX-F3 line module and its corresponding I/O modules, you can configure:
 - Up to 8 member links from different ports in the same bundle
 - Up to 12 bundles

- On a CT3 or CT3/T3-F0 line module and its corresponding I/O module, you can configure:
 - Only member links from the same T3 interfaces into the same bundle. You cannot configure member links from different T3 ports in the same bundle.
 - The 28 available T1 channels on each port combined in any manner that does not exceed 8 links per bundle (for example, 28 single-link T1 bundles or 3 eight-link bundles and 4 single-link bundles per port)

Unsupported MLFR Features

E-series routers do not support the following MLFR features:

- Fragmentation

The router does not support MLFR fragmentation or reassembly. When using MLFR on the router, configure all peer devices so that they do not fragment MLFR frames. The router drops all fragmented frames that it receives.

- Resequencing of out-of-order packets in the absence of fragmentation

Given the location in the network where the router resides, the NxT1 links to a customer site represent one of many places across the IP network where packets might be received out of order. For example, if the router has multiple uplinks to a core router, packets might be received out of order across these links. Packet resequencing is therefore left as an exercise for the end station rather than the aggregation router.

Before You Configure MLFR

Before you begin configuring MLFR, you must configure the physical layer interfaces that will be aggregated by MLFR.

The procedures described in this chapter assume that a physical layer interface, such as a T1 or T3 interface, has been configured. For details about configuring physical layer interfaces, see the *JUNOS Physical Layer Configuration Guide*.

Configuration Tasks

MLFR configuration consists of three major tasks, each with several steps:

1. Create the member links to be aggregated into a multilink bundle.
 - a. Specify the interface on which you want to configure MLFR.


```
host1(config)#interface serial 2/0:1
```
 - b. Specify MLFR as the encapsulation method on the interface.


```
host1(config-if)#encapsulation mlframe-relay ietf
```

2. Add member links to a multilink bundle.

- a. Define the MLFR bundle.

```
host1(config)#interface mlframe-relay boston
```

- b. Add each member link.

```
host1(config-if)#member-interface serial 2/0:1
```

- c. (Optional) Add a description to the major interface.

```
host1(config-if)#frame-relay description bostonBundleDescription
```

- d. (Optional) Configure Frame Relay parameters.

```
host1(config-if)#frame-relay intf-type dce  
host1(config-if)#frame-relay lmi-type cisco
```

3. Configure the Frame Relay subinterface.

- a. Define the subinterface for the MLFR bundle.

```
host1(config)#interface mlframe-relay boston.1
```

- b. Assign a DLCI for the subinterface.

```
host1(config-subif)#frame-relay interface-dlci 16 ietf
```

- c. (Optional) Add a description to the subinterface.

```
host1(config-subif)#frame-relay description bostonBundleSubOneDescription
```

- d. Assign an IP address to the subinterface.

```
host1(config-subif)#ip address 10.10.100.1 255.255.255.0
```

Configuration Example

The following commands configure three T1 lines and aggregate them into a multilink bundle named boston.

```
host1(config)#interface serial 2/0:1  
host1(config-if)#encapsulation mlframe-relay ietf  
host1(config-if)#exit  
host1(config)#interface serial 2/0:2  
host1(config-if)#encapsulation mlframe-relay ietf  
host1(config-if)#exit  
host1(config)#interface serial 2/0:3  
host1(config-if)#encapsulation mlframe-relay ietf  
host1(config-if)#exit  
host1(config)#interface mlframe-relay boston  
host1(config-if)#member-interface serial 2/0:1  
host1(config-if)#frame-relay description bostonBundleDescription  
host1(config-if)#frame-relay intf-type dce  
host1(config-if)#frame-relay lmi-type cisco
```

```

host1(config-if)#member-interface serial 2/0:2
host1(config-if)#member-interface serial 2/0:3
host1(config-if)#exit
host1(config)#interface mlframe-relay boston.1
host1(config-subif)frame-relay description bostonBundleSubOneDescription
host1(config-subif)#frame-relay interface-dlci 16 ietf
host1(config-subif)#ip address 10.10.100.1 255.255.255.0

```

Configuring Frame Relay Versus MLFR

All the configuration commands that apply to Frame Relay also apply to MLFR. The following listing describes commands specific to configuring MLFR; for other Frame Relay commands, see *Chapter 2, Configuring Frame Relay*.

encapsulation mlframe-relay ietf

- Use to configure MLFR as the encapsulation method on an individual interface.
- Use this command only within the context of an individual interface. Issuing this command creates an MLFR link, also referred to as an MLFR bundle member.
- Example


```

host1(config)#interface serial 2/0:1
host1(config-if)#encapsulation mlframe-relay ietf

```
- Use the **no** version to disable MLFR on an interface.

interface mlframe-relay

- Use to create a Frame Relay major interface, also known as the MLFR bundle.
- Example


```

host1(config-if)#interface mlframe-relay group2

```
- Use the **no** version to delete the MLFR bundle.

member-interface

- Use to add an MLFR interface—also known as an MLFR bundle member—to an MLFR bundle.
- Example


```

host1(config-if)#member-interface serial 2/0:1

```
- Use the **no** version to remove the specified interface from the MLFR bundle.

Monitoring MLFR

Use the commands in this section to display information about MLFR interfaces.

You can set a statistics baseline for an MLFR bundle or subinterface using the **baseline frame-relay interface mlframe-relay** command. Similarly, you can set a statistics baseline for an MLFR link with the **baseline frame-relay multilink interface** command. Use the **delta** keyword with the **show** commands described below to display statistics with the baseline values subtracted.

After you configure multilink Frame Relay, you can use the **show frame-relay** commands to view information about the multilink. For information about these commands, see *Chapter 2, Configuring Frame Relay*.

You can use the output filtering feature of the **show** command to include or exclude lines of output based on a text string you specify. Refer to *show Commands in JUNOS System Basics Configuration Guide, Chapter 2, Command-Line Interface*, for details.

baseline frame-relay interface

- Use to set a statistics baseline for the Frame Relay layer on MLFR bundles, Frame Relay interfaces, subinterfaces, and circuits.
- Specify the keyword **mlframe-relay** and the name of the MLFR bundle to set a baseline for the Frame Relay statistics on an MLFR bundle.
- The router implements the baseline by reading and storing the statistics at the time the baseline is set and then subtracting this baseline whenever baseline-relative statistics are retrieved.
- You cannot set a baseline for groups of interfaces, subinterfaces, or circuits. You must set baselines one at a time.
- When baselining is requested, the time since the last baseline was set is displayed in *hours:minutes:seconds* or *days/hours* format. If a baseline has not been set, the message “No baseline has been set” is displayed instead.
- The regular interface statistics and LMI statistics for interfaces are subject to the same baseline timestamp. You cannot set separate baselines for these statistics.
- Use the optional **delta** keyword with Frame Relay **show** commands to specify that baselined statistics are to be shown.
- Example

```
host1#baseline frame-relay interface mlframe-relay boston
```
- There is no **no** version.

baseline frame-relay multilinkinterface

- Use to set a statistics baseline for MLFR links.
- The router implements the baseline by reading and storing the statistics at the time the baseline is set and then subtracting this baseline whenever baseline-relative statistics are retrieved.
- When baselining is requested, the time since the last baseline was set is displayed in *hours:minutes:seconds* or *days/hours* format. If a baseline has not been set, the message “No baseline has been set” is displayed instead.
- The regular interface statistics and LIP statistics for interfaces are subject to the same baseline timestamp. You cannot set separate baselines for these statistics.
- Use the optional **delta** keyword with Frame Relay **show** commands to specify that baselined statistics are to be shown.
- Example

```
host1#baseline frame-relay multilinkinterface serial 3/2
```
- There is no **no** version.

show frame-relay interface

- Use to display the information about the Frame Relay layer of the interface.
- Use the **brief** keyword to display the operational status of all configured interfaces.
- Use the optional **delta** keyword to specify that baselined statistics are to be shown.
- Field descriptions
 - Frame relay interface mlframe-relay—Name of the MLFR bundle
 - Status of the major Frame Relay interface—One of the following states:
 - Up—Traffic can flow on the interface
 - Offline—Traffic cannot flow because hardware is unavailable
 - Down—Traffic cannot flow because of a problem in the interface at the current protocol layer
 - LowerLayerDown—Traffic cannot flow because of a problem in an interface at a lower protocol layer
 - AdministrativelyDown—Traffic cannot flow because of manual administrative intervention
 - Number of interface down transitions—Number of interfaces that have changed to a down state
 - Time since last status change—Time since the interface last changed its state
 - In bytes—Number of inbound bytes received on the interface
 - In frames—Number of inbound frames received on the interface
 - In errors—Number of inbound errors received on the interface
 - In discards—Number of inbound packets discarded

- In unknown protos—Number of packets received on the interface with unknown protocols
- Out bytes—Number of outbound bytes transmitted on the interface
- Out frames—Number of outbound frames transmitted on the interface
- Out errors—Number of outbound errors transmitted on the interface
- Out discards—Number of outbound packets discarded

■ Example 1

```
host1#show frame-relay interface brief
Frame relay interface mlframe-relayTEST, status is up
```

■ Example 2

```
host1#show frame-relay interface mlframe-relay TEST
Frame relay interface mlframe-relayTEST, status is up
Number of interface down transitions is 0
Time since last status change 00:01:47
Number of configured circuits: 2
  In bytes: 452          Out bytes: 198
  In frames: 19         Out frames: 11
  In errors: 0          Out errors: 0
  In discards: 8        Out discards: 0
  In unknown protos: 0
```

■ Example 3

```
host1#show frame-relay interface mlframe-relay members
Frame relay interface mlframe-relay TEST is up
  Frame relay multilink member-interface 4/0:1 is up
  Frame relay multilink member-interface 4/1:1 is up
```

show frame-relay lip

- Use to display the state of MLFR Link Integrity Protocol (LIP) on an MLFR link.
- Use the **brief** keyword to display the operational status of all configured interfaces.
- Use the **delta** keyword to specify that baselined statistics are to be shown.
- Field descriptions
 - Frame relay interface—Specifier for the Frame Relay interface
 - Status of the major Frame Relay interface—One of the following states:
 - Up—Traffic can flow on the interface
 - Offline—Traffic cannot flow because hardware is unavailable
 - Down—Traffic cannot flow because of a problem in the interface at the current protocol layer
 - LowerLayerDown—Traffic cannot flow because of a problem in an interface at a lower protocol layer
 - AdministrativelyDown—Traffic cannot flow because of manual administrative intervention
 - Number of interface down transitions—Number of interfaces that have changed to a down state

- Time since last status change—Time since the interface last changed its state
- Add Links sent—Number of Add Link messages sent from this interface
- Add Links received—Number of Add Link messages received on this interface
- Add Link Acknowledgments sent—Number of Add Link acknowledgments sent from this interface
- Add Link Acknowledgments received—Number of Add Link acknowledgments received on this interface
- Add Link Rejects sent—Number of Add Link Reject messages sent from this interface
- Add Link Rejects received—Number of Add Link Reject messages received on this interface
- Hellos sent—Number of Hello messages sent from this interface
- Hellos received—Number of Hello messages received on this interface
- Hello Acknowledgments sent—Number of Hello messages sent from this interface
- Hello Acknowledgments received—Number of Hello messages received on this interface
- Remove Links sent—Number of Remove Link messages sent from this interface
- Remove Links received—Number of Remove Link messages received on this interface
- Remove Link Acknowledgments sent—Number of Remove Link acknowledgments sent from this interface
- Remove Link Acknowledgments received—Number of Remove Link acknowledgments received on this interface
- Example 1

```
host1#show frame-relay lip brief
```

```
LIP information for frame relay interface 4/0:1, status is up
```

```
Number of interface down transitions is 0
```

```
Time since last status change 00:03:16
```

```
LIP information for frame relay interface 4/1:1, status is up
```

```
Number of interface down transitions is 0
```

```
Time since last status change 00:03:20
```

- Example 2

```

host1#show frame-relay lmi interface serial 4/0:1
LIP information for frame relay interface 4/0:1, status is up
Number of interface down transitions is 0
Time since last status change 00:05:19
  Add Links sent: 1
  Add Links received: 1
  Add Link Acknowledgements sent: 1
  Add Link Acknowledgements received: 1
  Add Link Rejects sent: 0
  Add Link Rejects received: 0
  Hellos sent: 32
  Hellos received: 31
  Hello Acknowledgements sent: 31
  Hello Acknowledgements received: 32
  Remove Links sent: 0
  Remove Links received: 0
  Remove Link Acknowledgements sent: 0
  Remove Link Acknowledgements received: 0

```

show frame-relay lmi

- Use to display configuration and state information and statistics about the LMI.
- You can specify an interface type and location.
- Use the **brief** keyword to display abbreviated PVC information.
- Use the **delta** keyword to specify that baselined statistics are to be shown.
- DTE field descriptions
 - Frame relay DTE interface mlframe-relay—Name of the MLFR bundle
 - N391—Value of the N391 full-status polling counter
 - N392—Value of the N392 error threshold counter
 - N393—Value of the N393 monitored events counter
 - T391—Value of the T391 link integrity polling timer interval
 - Configured LMI type—One of the following options:
 - ANSI—ANSI T1.617 Annex D
 - Q933A—ITU-T Q.933 Annex A
 - Cisco—Original *Group of Four* specification developed by DEC, Northern Telecom, Stratacom, and Cisco
 - None—Suppresses LMI
 - status is up—Availability of the MLFR bundle: up or down
 - Number of interface down transitions—Number of times the interface has become unavailable
 - Time since last status change—elapsed time since LMI information changed
 - Enquiries sent—Total number of LMI status inquiries sent by the DTE on this interface
 - Full enquiries sent—Total number of LMI full status inquiries sent by the DTE on this interface

- ❑ Enquiry responses received—Total number of LMI full and regular status responses received by the DTE on this interface
 - ❑ Full enquiry responses received—Total number of LMI full status responses received by the DTE on this interface
 - ❑ Async updates received—Total number of asynchronous LMI updates received by the DTE on this interface
 - ❑ Unknown messages received—Total number of unknown LMI messages received on this interface
 - ❑ Loss of sequencing detected—Total number of times a loss of sequencing in received LMI messages was detected by the DTE on this interface
 - ❑ No response timeouts—Total number of times a timeout occurred without receiving a response to an LMI request by the DTE on this interface
 - ❑ Last sequence number sent—Last sequence number sent on this interface
 - ❑ Last sequence number received—Last sequence number received on this interface
- DCE field descriptions:
 - Frame relay DCE interface mlframe-relay—Name of the MLFR bundle
 - N391—Value of the N391 full-status polling counter
 - N392—Value of the N392 error threshold counter
 - T392—Value of the T392 polling verification timer
 - Configured LMI type: one of the following options:
 - ❑ ANSI—ANSI T1.617 Annex D
 - ❑ Q933A—ITU-T Q.933 Annex A
 - ❑ Cisco—Original *Group of Four* specification developed by DEC, Northern Telecom, Stratacom, and Cisco
 - ❑ None—Suppresses LMI
 - status is up—Availability of the MLFR bundle: up or down
 - Number of interface down transitions—Number of times the interface has become unavailable
 - Time since last status change—Elapsed time since LMI information changed
 - ❑ Enquiries received—Total number of LMI status inquiries received by the DCE on this interface
 - ❑ Enquiry responses sent—Total number of LMI status responses sent by the DCE on this interface
 - ❑ Full enquiry responses sent—Total number of LMI full status responses sent by the DCE on this interface
 - ❑ Async updates sent—Total number of LMI ASYNC updates sent by the DCE on this interface

- ❑ Unknown messages received—Total number of unknown LMI messages received on this interface
- ❑ Loss of sequencing detected—Total number of times a loss of sequencing in received LMI messages was detected by the DCE on this interface
- ❑ No response timeouts—Total number of times a timeout occurred without receiving a status inquiry from the DTE on this interface
- ❑ Last sequence number sent—Last sequence number sent on this interface
- ❑ Last sequence number received—last sequence number received on this interface

■ Example 1

```
host1#show frame-relay lmi brief
LMI information for frame relay DTE interface mlframe-relayTEST
DTE parameter N391 is 6, N392 is 3, N393 is 4, T391 is 10
Configured LMI type is ANSI, status is up
Number of interface down transitions is 0
Time since last status change 00:05:39
```

■ Example 2

```
host1#show frame-relay lmi interface mlframe-relay TEST
LMI information for frame relay DTE interface mlframe-relayTEST
DTE parameter N391 is 6, N392 is 3, N393 is 4, T391 is 10
Configured LMI type is ANSI, status is up
Number of interface down transitions is 0
Time since last status change 00:06:20
Enquiries sent: 39
Full enquiries sent: 7
Enquiry responses received: 39
Full enquiry responses received: 7
Async updates received: 0
Unknown messages received: 0
Loss of sequencing detected: 0
No response timeouts: 0
Last sequence number sent: 39
Last sequence number received: 39
```

show frame-relay map

- Use to display the current Frame Relay and MLFR map entries.
- Field descriptions
 - subinterface—Name and subinterface number of the MLFR bundle in the format *bundle-name.subinterface-number*
 - State of the subinterface—One of the following states:
 - ❑ Up—Traffic can flow on the interface
 - ❑ Offline—Traffic cannot flow because hardware is unavailable
 - ❑ Down—Traffic cannot flow because of a problem in the interface at the current protocol layer

- ❑ LowerLayerDown—Traffic cannot flow because of a problem in an interface at a lower protocol layer
 - ❑ AdministrativelyDown—Traffic cannot flow because of manual administrative intervention
- DLCI number—Decimal value, hexadecimal value, and value as it appears on the wire of the DLCI
- Example


```
host1#show frame-relay map
Frame relay sub-interface mlframe-relayTEST.1 (up): DLCI 16(0x10,0x4)
Frame relay sub-interface mlframe-relayTEST.2 (up): DLCI 17(0x11,0x14)
```

show frame-relay multilinkInterface

- Use to display the statistics about all MLFR interfaces or the specified MLFR interfaces.
- Field descriptions
 - Multilink Frame relay interface—Specifier for the Frame Relay interface
 - State of the MLFR interface—One of the following states:
 - ❑ Up—Traffic can flow on the interface
 - ❑ Offline—Traffic cannot flow because hardware is unavailable
 - ❑ Down—Traffic cannot flow because of a problem in the interface at the current protocol layer
 - ❑ LowerLayerDown—Traffic cannot flow because of a problem in an interface at a lower protocol layer
 - ❑ AdministrativelyDown—Traffic cannot flow because of manual administrative intervention
 - Number of multilink interface down transitions—Number of interfaces that have changed to a down state
 - Time since last status change—Time since the interface last changed its state
 - In bytes—Number of inbound bytes received on the interface
 - In frames—Number of inbound frames received on the interface
 - In errors—Number of inbound errors received on the interface
 - In discards—Number of inbound packets discarded
 - In unknown protos—Number of packets received on the interface with unknown protocols
 - Out bytes—Number of outbound bytes transmitted on the interface
 - Out frames—Number of outbound frames transmitted on the interface
 - Out errors—Number of outbound errors transmitted on the interface
 - Out discards—Number of outbound packets discarded

- Example

```

host1#show frame-relay multilinkInterface
Multilink Frame relay interface 6/2:2, status is down
Number of multilink interface down transitions is 0
Time since last status change 2 days, 23 hours
  In bytes: 0                Out bytes: 0
  In frames: 0              Out frames: 0
  In errors: 0              Out errors: 0
  In discards: 0            Out discards: 0
  In unknown protos: 0

```

show frame-relay pvc

- Use to display statistics about PVCs for Frame Relay interfaces.
- Specify a DLCI number or an interface type and location.
- Use the optional **delta** keyword to specify that baselined statistics are to be shown.
- The **brief** keyword displays abbreviated PVC information.
- Field descriptions
 - DLCI—DLCI number
 - subinterface—Name and subinterface number of the MLFR bundle in the format *bundle-name.subinterface-number*
 - status—Status of the PVC
 - Number of circuit status inactive transitions—Number of times a circuit came down because of error conditions
 - Time since creation—Time since the PVC was created
 - last status change—Time since the PVC status last changed
 - In pkts—Number of incoming packets received on the circuit
 - Out pkts—Number of outgoing packets transmitted on the circuit
 - In bytes—Number of input bytes received on the circuit
 - Out bytes—Number of output bytes received on the circuit
 - In FECN pkts—Number of packets received with the forward explicit congestion notification (FECN) bit set. The FECN bit is set by a network to notify the user that data traffic may experience congestion in the direction of the frame carrying the FECN bit. The FECN bit is set by the network (not by the transmitting user), and there is no obligation for end systems to take any action regarding the FECN bit.
 - Out FECN pkts—Number of packets transmitted with the FECN bit set
 - In BECN pkts—Number of packets received with the backward explicit congestion notification (BECN) bit set. The BECN bit is set by a network to notify the user that data traffic may experience congestion in the opposite direction of the frame carrying the BECN bit. The BECN bit is set by the network, and there is no obligation for end systems to take any action regarding the BECN bit.
 - Out BECN pkts—Number of packets transmitted with the BECN bit set

- In DE pkts—Number of packets received with the discard eligibility (DE) bit set. When the DE bit is set, it indicates that the frame is discarded in preference to other frames without the DE bit set. The DE bit may be set by the network or the user. Once it is set, it cannot be reset by the user.
- Out DE pkts—Number of packets transmitted with the DE bit set
- Dropped packets—Number of dropped packets

■ Example 1

```
host1#show frame-relay pvc brief
PVC information for frame relay DTE interface mlframe-relayTEST

DLCI 16 in sub-interface mlframe-relayTEST.1, status is active
DLCI 17 in sub-interface mlframe-relayTEST.2, status is active
```

■ Example 2

```
host1#show frame-relay pvc interface mlframe-relay TEST
PVC information for frame relay DTE interface mlframe-relayTEST

DLCI 16 in sub-interface mlframe-relayTEST.1, status is active
Number of circuit status inactive transitions is 0
Time since creation 00:07:20, last status change 00:07:11
  In pkts: 14          Out pkts: 0
  In bytes: 420        Out bytes: 0
  In FECN pkts: 0      Out FECN pkts: 0
  In BECN pkts: 0      Out BECN pkts: 0
  In DE pkts: 0        Out DE pkts: 0
  Dropped pkts: 14

DLCI 17 in sub-interface mlframe-relayTEST.2, status is active
Number of circuit status inactive transitions is 0
Time since creation 00:07:20, last status change 00:07:11
  In pkts: 14          Out pkts: 0
  In bytes: 420        Out bytes: 0
  In FECN pkts: 0      Out FECN pkts: 0
  In BECN pkts: 0      Out BECN pkts: 0
  In DE pkts: 0        Out DE pkts: 0
  Dropped pkts: 14
```

show frame-relay subinterface

- Use to display the state of the subinterface.
- The subinterface can be in one of the following states:
 - Up—Traffic can flow on the interface
 - Offline—Traffic cannot flow because hardware is unavailable
 - Down—Traffic cannot flow because of a problem in the interface at the current protocol layer
 - LowerLayerDown—Traffic cannot flow because of a problem in an interface at a lower protocol layer
 - AdministrativelyDown—Traffic cannot flow because of manual administrative intervention
- Use the **brief** keyword to display only the operational status of all configured subinterfaces.

- Use the optional **delta** keyword to specify that baselined statistics are to be shown.
- Field descriptions
 - Frame relay sub-interface `mlframe-relay`—Name and subinterface number of the MLFR bundle in the format *bundle-name.subinterface-number*
 - status—State of the subinterface, as follows:
 - Up—Traffic can flow on the interface
 - Offline—Traffic cannot flow because hardware is unavailable
 - Down—Traffic cannot flow because of a problem in the interface at the current protocol layer
 - LowerLayerDown—Traffic cannot flow because of a problem in an interface at a lower protocol layer
 - AdministrativelyDown—Traffic cannot flow because of manual administrative intervention
 - Number of sub-interface down transitions—Number of times a subinterface came down because of error conditions
 - Time since last status change—Time since the last status change on the subinterface
 - In bytes—Number of inbound bytes received on the subinterface
 - Out bytes—Number of outbound bytes transmitted on the subinterface
 - In frames—Number of inbound frames received on the interface
 - Out frames—Number of outbound frames transmitted on the interface
 - In errors—Number of inbound errors received on the subinterface
 - Out errors—Number of outbound errors transmitted on the subinterface
 - In discards—Number of inbound packets discarded
 - Out discards—Number of outbound packets discarded
 - In unknown protos—Number of packets received on the subinterface with unknown protocols

■ Example 1

```
host1#show frame-relay subinterface brief
Frame relay sub-interface mlframe-relayTEST.1, status is up
Frame relay sub-interface mlframe-relayTEST.2, status is up
```

■ Example 2

```
host1#show frame-relay subinterface mlframe-relay TEST
Frame relay sub-interface mlframe-relayTEST.1, status is up
Number of sub-interface down transitions is 0
Time since last status change 00:07:49
  In bytes: 512          Out bytes: 0
  In frames: 16         Out frames: 0
  In errors: 0          Out errors: 0
  In discards: 16       Out discards: 0
  In unknown protos: 0
```

```

Frame relay sub-interface mlframe-relayTEST.2, status is up
Number of sub-interface down transitions is 0
Time since last status change 00:07:50
  In bytes: 512          Out bytes: 0
  In frames: 16         Out frames: 0
  In errors: 0          Out errors: 0
  In discards: 16       Out discards: 0
  In unknown protos: 0

```

show frame-relay summary

- Use to scan all defined Frame Relay interfaces and circuits and to report the status for each discovered interface and circuit as follows:
 - Up—Traffic can flow on the interface
 - Down—Traffic cannot flow because of a problem in the network
 - Unavailable—Traffic cannot flow because hardware is unavailable
- Example

```

host1#show frame-relay summary
2 multilink interface(s) defined, 2 up, 0 down
1 interface(s) defined, 1 up, 0 down
2 sub-interface(s) defined, 2 up, 0 down
2 circuit(s) defined, 2 up, 0 down

```