

## qos-interface-superset

---

<b>Syntax</b>	[ no ] qos-interface-superset <i>interfaceSupersetName</i>
<b>Release Information</b>	Command introduced in JUNOS Release 9.2.0.
<b>Description</b>	Configures a QoS interface superset and enters QoS Interface Superset Configuration mode. The <b>no</b> version deletes the interface superset.
<b>Options</b>	■ <i>interfaceSupersetName</i> —Name of the QoS interface superset
<b>Mode</b>	Global Configuration
<b>Related Topics</b>	■ Configuring Interface Supersets for QoS

