

## show atm interface

---

<b>Syntax</b>	show atm interface { atm <i>interfaceSpecifier</i>   brief } [ delta ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JUNOS Release 7.1.0.
<b>Description</b>	Displays configuration information about an ATM interface or a brief description of all ATM (major) interfaces configured in the router.
<b>Options</b>	<ul style="list-style-type: none"><li>■ <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see Interface Types and Specifiers</li><li>■ brief—Displays the status and number of configured VCs for all ATM interfaces configured in the router</li><li>■ delta—Displays baselined statistics</li><li>■ <i>filter</i>—See Filtering show Commands</li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ Monitoring the QoS Configuration of ATM Interfaces</li><li>■ Monitoring the Policy Configuration of ATM Subinterfaces</li></ul>

