

## show ipv6 forwarding-table slot

---

**Syntax** show ipv6 forwarding-table slot *slotNumber*

**Release Information** Command introduced in JUNOS Release 7.1.0.

**Description** Displays information about routing table memory, load errors, and status for the IPv6 forwarding table of a specific line module.

**Options** ■ *slotNumber*—Number of the slot containing the line module

**Mode** Privileged Exec, User Exec

