

Setting the Baseline for RADIUS Dynamic-Request Server Statistics

You can set a statistics baseline for packet mirroring-related RADIUS statistics. To show baseline statistics, use the **delta** keyword with the **show radius dynamic-request statistics** command.

To set a baseline for RADIUS statistics for packet mirroring:

- Issue the **baseline radius dynamic-request** command:

```
host1#baseline radius dynamic-request
```

There is no **no** version.

Related Topics

- Monitoring RADIUS Dynamic-Request Server Statistics
- **baseline radius dynamic-request** command

