

Setting a Baseline for RADIUS Relay Statistics

You can set a baseline for RADIUS relay statistics. To show baseline statistics, use the **delta** keyword with the **show radius relay** command.

To set a baseline for RADIUS relay statistics:

- Issue the **baseline radius relay** command:

```
host1#baseline radius relay
```

There is no **no** version.

- Related Topics**
- Monitoring RADIUS Relay Server Statistics
 - **baseline radius relay** command

