

## Monitoring the Configuration of QoS Port-Type Profiles

---

**Purpose** Display information about QoS port-type profiles.

**Action** To display information about all interface types:

```
host1#show qos-port-type-profile
default-port-profile ethernet qos-profile ethernet-default
default-port-profile atm qos-profile atm-default
default-port-profile serial qos-profile serial-default
default-port-profile server-port qos-profile server-default
default-port-profile lag qos-profile lag-default
```

**Meaning** Displays a list of all **qos-port-type-profile** commands as they have been entered.

- Related Topics**
- Configuring a QoS Profile
  - Attaching a QoS Profile to an Interface
  - Creating Parameter Instances
  - Example: Port-Type QoS Profile Attachment
  - show qos-port-type-profile command

