

## Monitoring the Calling-Station-Id RADIUS Attribute

---

**Purpose** Display the format and delimiter used for the Calling-Station-Id [31] attribute.

**Action** To display the format configured for the Calling-Station-Id [31] attribute:

```
host1#show radius calling-station-format  
fixed-format-adapter-new-field (includes SVLAN ID)
```

To display the delimiter used in the Calling-Station-Id for authenticated ATM PPP users:

```
host1#show radius calling-station-delimiter  
&
```

- Related Topics**
- show radius calling-station-format command
  - show radius calling-station-delimiter command

