

Monitoring the DSL-Port-Type RADIUS Attribute

Purpose Display the DSL port type for NAS-Port-Type attribute for ATM and Ethernet users.

Action To display the DSL port type for NAS-Port-Type attribute for ATM users:

```
host1#show radius dsl-port-type  
xds1
```

To display the NAS-Port-Type attribute for Ethernet interfaces:

```
host1#show radius ethernet-port-type  
virtual
```

Related Topics

- show radius dsl-port-type command
- show radius ethernet-port-type command

