

Monitoring the Delimiter Character in the Remote-Circuit-ID for RADIUS

Purpose Display the delimiter character configured to set off components in the PPPoE remote circuit ID value captured from a DSLAM. The default delimiter character is #.

Action To display the delimiter character:

```
host1#show radius remote-circuit-id-delimiter  
!
```

Related Topics ■ show radius remote-circuit-id-delimiter command

