

Monitoring the Format of the Remote-Circuit-ID for RADIUS

Purpose Display the format configured for the PPPoE remote circuit ID value captured from a DSLAM.

The default format is agent-circuit-ID. If the PPPoE remote circuit ID value is configured to include any or all of the agent-circuit-id, agent-remote-id, and nas-identifier components, the display lists the components included and the order in which they appear.

If the PPPoE remote circuit ID value is configured to use the format for the **dsl-forum-1** keyword of the [\[Unresolved xref\]](#) command, the display indicates that this format is in effect.

Action To display the format configured for the PPPoE remote circuit ID value captured from a DSLAM:

```
host1#show radius remote-circuit-id-format
nas-identifier agent-circuit-id agent-remote-id
```

Related Topics

- [\[Unresolved xref\]](#)
- show radius remote-circuit-id-format command

