

Setting the Editing Level for the SRC CLI

The editing level determines which statements and commands are visible to a user from the SRC CLI. Table 1 on page 1 describes the editing levels.

Table 1: Editing Levels

Level	Description
Basic	Only values that must be configured are visible.
Normal	Common values and basic values are visible; this is the default setting.
Advanced	All configurable values, including the common and basic values, are visible.
Expert	All configurable values and internal values used for debugging are visible.

If you log in to the CLI as root, the default editing level, normal, is available to you because root does not require a user profile to access the CLI. Although root access is used for initial configuration of a C-series Controller, user accounts are used to enter commands and statements at the CLI.

The editing level can be set for:

- Specified users in the user profiles
- A current user session.

For information about the editing level of configuration statements and options, see the *SRC-PE CLI Command Reference*.

To set the editing level for the CLI:

- In operational mode, use the **set cli level** command.
 - **set cli level basic**
 - **set cli level normal**
 - **set cli level advanced**
 - **set cli level expert**

To view the editing level of the current CLI session:

- In operational mode, use the **show cli** command.

