

Local Properties for SRC Components

Before you configure an SRC component, configure the component's local properties. In many cases you can use the default configuration. From the CLI, local properties are configured for a slot. On a C-series Controller, the slot configuration is applied to the appropriate slot.

