

Outgoing Traffic Fields for NAT Addressing in Enterprise Manager Portal

Use fields in this topic to configure NAT addressing for outgoing traffic.

Address Range

- Contiguous range of public IP addresses to which the source addresses of clients in the enterprise are translated.
- Value—Public IP addresses
- Guidelines—Select the starting and ending IP addresses in the From and To menus. For one IP address, select the same address in the From and To menus.
- Default—No value

Port Range

- Range of ports that are used as the source ports in outgoing IP packets after the NAT translation.
- Value—Integers in the range 0–65535
- Guidelines—Specify the starting and ending port numbers in the From and To fields. Be sure to use a port range big enough to allow all the private addresses to share the limited set of public addresses. To specify all ports in the range 1024–65535, leave these fields empty.
- Default—No value

Enabled

- Whether or not the router applies NAT to outgoing traffic on this access.
- Value
 - Enabled—Checked box
 - Disabled—White box
- Default—Disabled

