

Overview of Commands to Control the SRC CLI Environment

In operational mode, you can use commands to control the command-line interface (CLI) environment. For example, you can specify the remote terminal type. The following output lists the options that you can use to control the CLI environment settings.

```
user@host> set cli ?
Possible completions:
complete-on-space  Command completion on partial command entry
directory          Working directory on the system
language           Terminal language and encoding
level             Access level for CLI commands
password          Change the current password
prompt            CLI command prompt
screen-length      Number of lines on the screen
screen-width       Screen width in columns
terminal          Terminal type
```



NOTE: When you use SSH to log in to a C-series Controller or log in from the console when its terminal type is already configured, your terminal type, screen length, and screen width are already set.
