

Configuration Statements for NTP on C-series Controllers

Use the following configuration statements to configure NTP on a C-series Controller at the [edit] hierarchy level.

```
system ntp {  
    boot-server boot-server;  
    broadcast-client;  
    trusted-key [trusted-key...];  
}
```

```
system ntp authentication-key key-number {  
    value value;  
}
```

```
system ntp broadcast address {  
    key key ;  
    ttl ttl ;  
    version version ;  
}
```

```
system ntp multicast-client {  
    address;  
}
```

```
system ntp peer address {  
    key key;  
    version version;  
    prefer;  
}
```

```
system ntp server address {  
    key key;  
    version version;  
    prefer;  
}
```

- Related Topics**
- *SRC-PE CLI Command Reference*
 - NTP Support on C-series Controllers
 - Specifying Which NTP Server a C-series Controller Contacts on Startup

