

## Configuring Directory Connection Properties for SRC-ACP

---

To configure directory connection properties:

1. Click **Configure > Slot > Slot:0 > ACP > Initial > Directory Connection**.

The Directory Connection pane appears.

2. Enter information as described in the Help text in the main pane, and click **Apply**.

