

Configuring SRC-ACP

To use SRC-ACP in the SRC network, you must perform some configuration. For information about these configuration procedures, see:

1. (Optional) Configure a grouped configuration for SRC —ACP.
2. Configuring Local Properties for SRC-ACP
3. Configuring the SAE for SRC-ACP (C-Web Interface)
4. Configuring SRC-ACP Properties
5. (Edge and dual mode only) Configuring SRC-ACP to Manage the Edge Network
6. (Backbone and dual mode only) Configuring SRC-ACP to Manage the Backbone Network

You can automate and scale the configuration of congestion points using congestion point classification. For more information, see [Configuring NIC Test Data \(SRC CLI\)](#) and [Configuring Congestion Point Classification \(C-Web Interface\)](#).

