

Configuring RADIUS Authentication (C-Web Interface)

To configure information about RADIUS servers for authentication:

1. Click **Configure > System**.

The System pane appears.

2. From the Create new list, select **RADIUS Server**.
3. Type an IPv4 address or IPv6 address in the dialog box, and click **OK**.

The RADIUS Server pane appears.

4. Enter information as described in the Help text in the main pane, and click **Apply**.

To configure a set of users that share a single account for authorization purposes, you create a template user.

