

Configuring TACACS+ Authentication (C-Web Interface)

To configure information about TACACS+ servers for authentication:

1. Click **Configure**, expand **System**, and then click **Tacplus Server**.

The Tacplus Server pane appears.

2. Click **Create**, enter information as described in the Help text in the main pane, and then click **Apply**.

To configure a set of users that share a single account for authorization purposes, you create a template user.

