

Before You Start the SRC CLI

Make sure the SRC software has been configured for remote access through SSH and/or Telnet



NOTE: On a C-series Controller, root access is not allowed over a Telnet session. To enable root access over an SSH connection, you must configure the `system services ssh root-login allow` statement.

Related Topics ■ For information about initial CLI configuration, see the *SRC-PE Getting Started Guide*.

