

## Adding a Service Scope

---

To add a service scope:

1. Add a service scope with the SRC CLI or the C-Web interface.

See [Configuring Service Scopes and Configuring Service Scopes \(C-Web Interface\)](#)

2. Optionally, configure a precedence for the service scope.

