


## Setting the Configuration Level for Enterprise Manager Portal

The default setting for the configuration level is Normal. With this setting you can configure most services on a JUNOS routing platform. If you want to configure more advanced features, such as static source NAT rules, you must change the configuration level of the portal. To do so:

1. Click the operator icon in the navigation pane.

The operator's Welcome page appears.

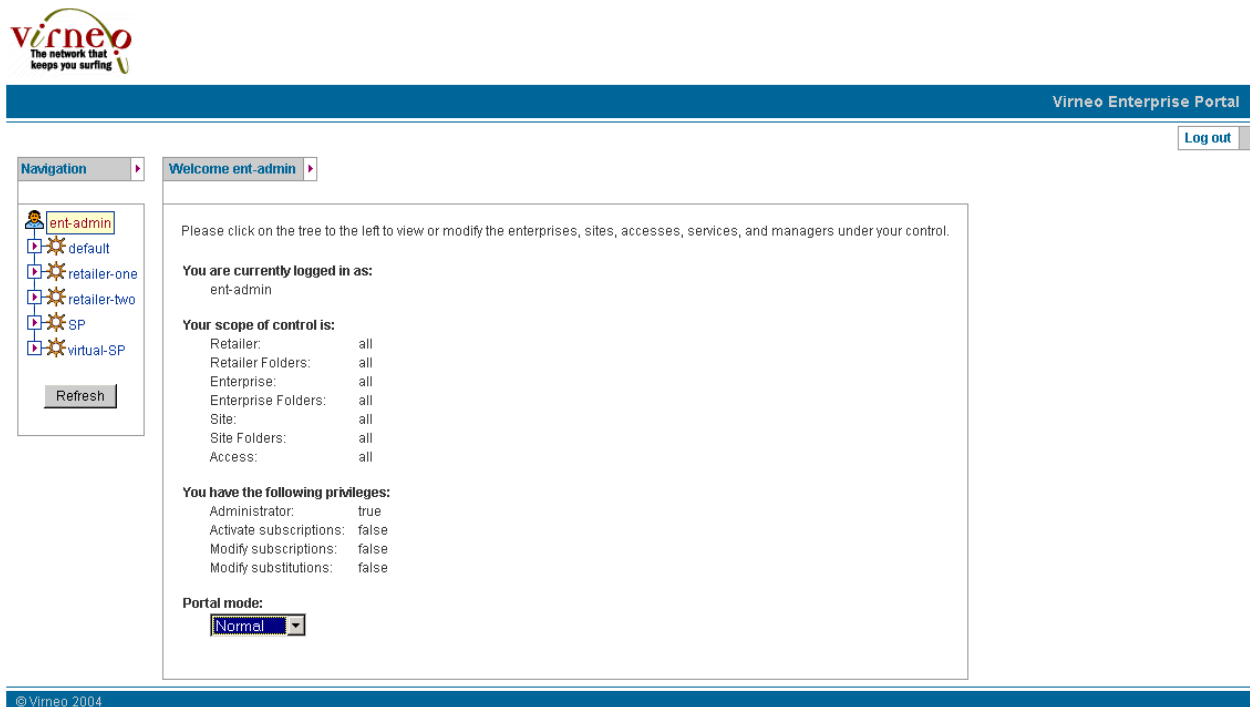

2. Select **Advanced** from the Portal mode drop-down list.

