

Deleting Basic Firewalls

To delete a basic firewall:

1. Disable all firewall exceptions and NAT rules configured for this subscriber.

For information about disabling these values, see the field descriptions in [Creating Firewall Exceptions for Stateful Firewalls and Applying NAT Rules to Traffic](#).

2. Disable all firewall exceptions and NAT rules that this subscriber inherits from parent subscribers.
3. Disable all firewall exceptions and NAT rules defined for this subscriber's subordinate subscribers.
4. Access the Firewall page for the subscriber for which you configured the firewall.
5. Select **No Firewall** from the Firewall Service menu.
6. Click **Apply**.

