

Modifying NAT Rules

To modify a NAT rule:

1. Modify the entry in the appropriate table.
2. Click **Apply**.

