

Configuring Advanced NIC Features

If you want to configure NIC features not available at the basic editing level, set the editing level to advanced or expert and use the CLI Help to obtain information about statement options.

