

Configuring NTP Broadcast Mode on a C-series Controller (C-Web Interface)

To configure NTP to operate in broadcast mode:

1. Click **Configure**, expand **System**, and click **NTP**.

The NTP pane appears.

2. In the Create new list, select **Broadcast**. Type an IP address or a hostname on one of the local networks or a multicast address assigned to NTP. Click **OK**.
3. Enter information as described in the Help text in the main pane, and click **Apply**.



NOTE: If the remote system has authentication enabled, specify an authentication key and value. The system transmits the specified authentication key when transmitting packets.

- Related Topics**
- NTP Support on C-series Controllers
 - Configuring NTP on a C-series Controller

