

## Limiting Subscribers on Router Interfaces

---

You can limit the number of authenticated subscribers who connect to an IP interface on the router. This plug-in does not limit the number of unauthenticated subscribers who connect to an IP interface, and does not limit the number of subscribers who connect to a physical or link-layer interface. In the case of subscriber interfaces, the plug-in limits the number of authenticated subscribers on the subscriber interface but not on the underlying primary IP interface.

To set up a plug-in that limits the number of subscribers on interfaces:

1. Click **Configure**, expand **Shared > SAE**, and then expand the SAE group for which you want to configure subscriber limits.
2. In the side pane, expand **Configuration > Plug Ins**.
3. Expand the plug-in that you created for limiting subscribers, and then click **Interface Subscriber Limit**.

The Interface Subscriber Limit pane appears.

4. Click **Create**, enter information as described in the Help text in the main pane, and then click **Apply**.

