

## Configuring Group Interfaces (C-Web Interface)

---

Group interfaces let you aggregate network interfaces into a single logical interface to support Ethernet redundancy. The group interfaces provide either hot standby or load-balancing services.

To configure an Ethernet group interface:

1. Click **Configure > Interfaces**.
2. In the dialog box, type the name of the new interface, and click **OK**.

The Interfaces pane appears.

3. Expand the interface, and click **Group**.
4. Click **Create**, enter information in the Group pane as described in the Help text in the main pane, and click **Apply**.
5. In the side pane, under the group click **ARP Monitoring**.

The ARP Monitoring pane appears.

6. Click **Create**, enter information in the Group pane as described in the Help text in the main pane, and click **Apply**.

- Related Topics**
- Configuring External Interfaces on a C-series Controller
  - Configuring Ethernet Redundancy (SRC CLI)

