

## Configuring a C-series Controller to Accept SSH Connections (C-Web Interface)

---

You can enable SSH to let users who have the appropriate privileges connect to a C-series Controller. For security reasons, we recommend that you do not allow remote users to access the C-Web interface as root.

1. Click **Configure**, expand **System > Services**, and then click **SSH**.

The SSH pane appears.

2. Click **Create**, enter information as described in the Help text in the main pane, and then click **Apply**.

